



UNIVERSAL INSTALLATION INSTRUKTION

Required tools:

- Drill / Impact driver
- Bits; T10, T20, Hex 4 & Hex 5

Before assembly:

- Remove all drawers before installing floor modules
- Remove the black plastic or wood floor

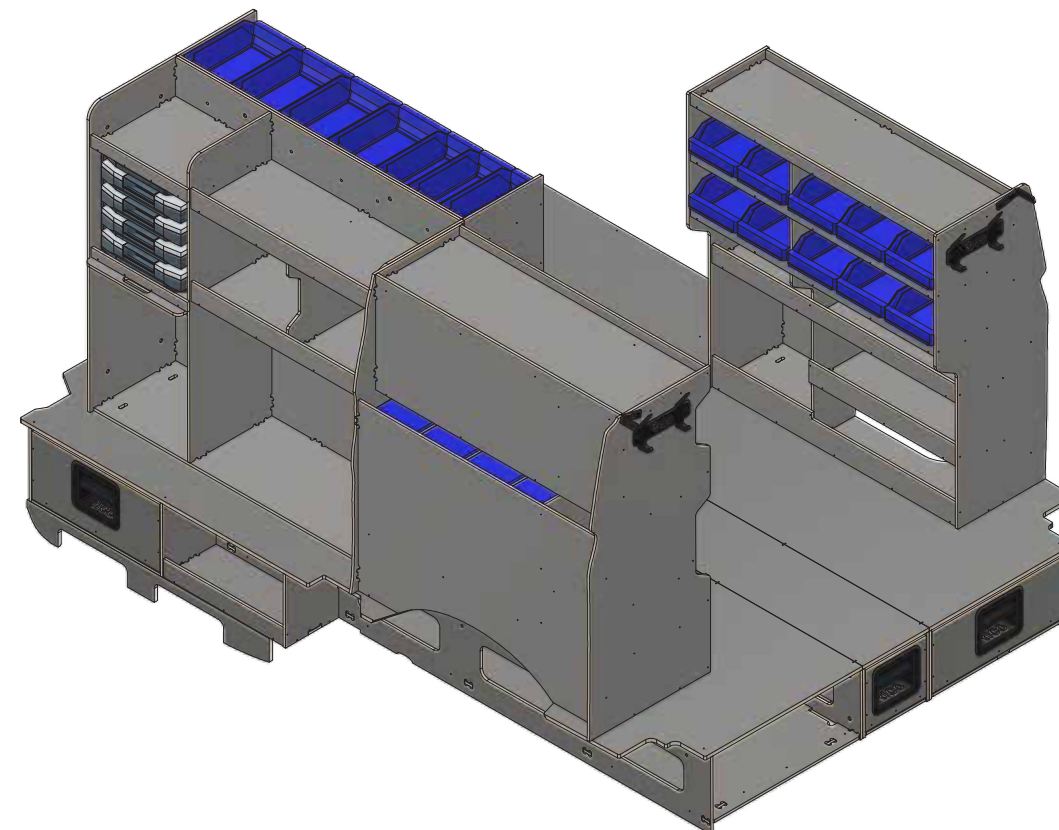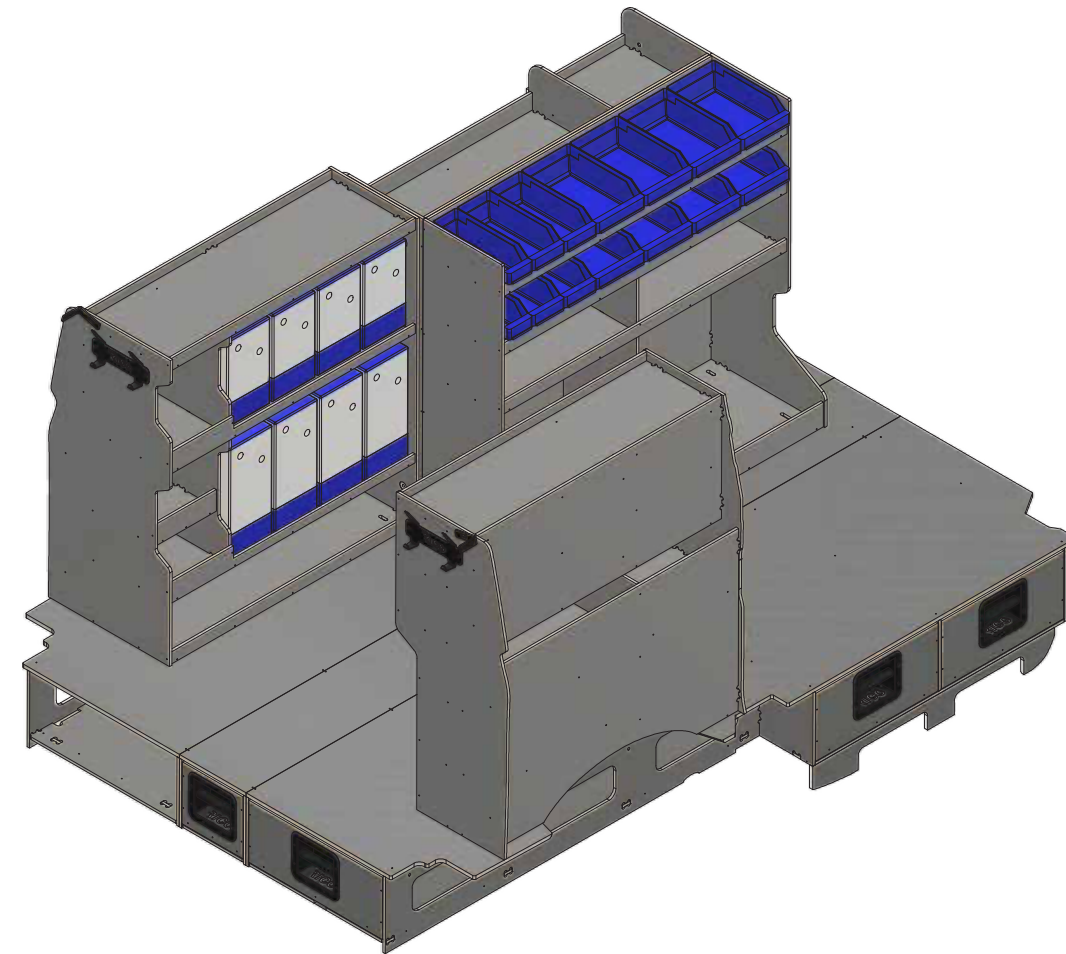

Instructions:

1. Remove the black plastic or wood floor, our floor should always be placed directly on the metal floor in the vehicle.
Position the left and right floor module as shown in picture #1.
2. Position the middle floor module between the left and right floor modules. Fasten the floor modules together using M6x16 Bolts.
3. Position the step underneath the floor modules and secure it using 3x30 screws.
Reinstall the drawers and install the drawer stoppers using the holes located on the inside rail of the floor system. See picture #3. If a rubber mat is included, position it flush with side and rear drawers edge. Install the supplied trim strips using 3x16 screws.
4. Position the side-door cabinet over the pre-drilled holes in the floor. Fasten the cabinet to the floor using M8x25 bolt.
5. Position the inner cabinet against the side-door cabinet. Fasten the inner cabinet to the side-door cabinet using M6x20 bolts and to the floor using M8x25 bolt.
6. Position the left rear cabinet over the pre-drilled holes in the floor. Fasten the cabinet to the side-door cabinet using M6x20 bolts and to the floor using M8x25 bolts.
7. Position the right rear cabinet over the pre-drilled holes in the floor. Fasten the cabinet to the floor using M8x25 bolt.
8. Fasten bracket to the cabinet with M6x16 bolt. Then fasten the bracket to the vehicle body using self drilling screw.

Assembly is now complete.

